

# PART NO: ABSHS-02

## 06-10 DODGE CHARGER HOOD SCOOP

PLEASE READ THESE INSTRUCTIONS CAREFULLY PRIOR TO INSTALLATION

**Important Note: Please inspect your hood scoop for proper fit before painting or mounting**

### Installation Instructions

#### Hardware Kit (Supplied on each hood scoop)

NIL

#### **Tools Required:-**

- Isopropyl alcohol or equivalent / Tissue Paper or Soft Cloth / Marker Pen

This Dodge Charger hood scoop kit is made from high quality ABS plastic. This product is produced by blow molding process with grille produced by high pressure injection.

#### **Hood Scoop Installation:-**

##### Step 1

1. Clean surface area that is to be covered by the hood scoop with isopropyl alcohol or equivalent.

##### Step 2

2. Set the hood scoop on the center line of the hood, the recommended distance between the hood scoop edge and hood edge is about 4 7/8". Mark the position of the hood scoop.

##### Step 3

3. Peel the tape backing at all corners (A to F) (illustration 1) and place the hood scoop on the marked position.

##### Step 4

4. Peel the tape backing completely and press the hood scoop gently onto the hood.


##### Step 5

5. Peel the tape backing of the grill and install it into the grill cavity of the hood scoop. (illustration 2)


##### Step 6

Hood scoop with grill installed. (illustration 3)

1)

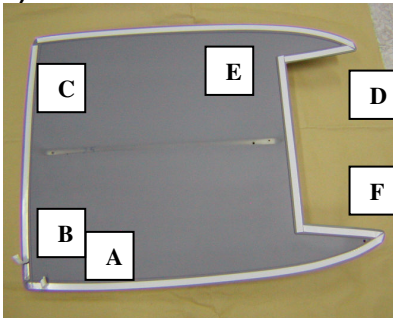

2)

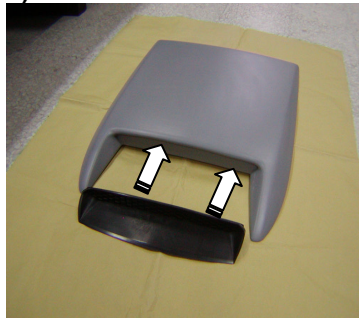

3)

