

**PLEASE READ THESE INSTRUCTION CAREFULLY PRIOR TO INSTALLATION**

**Important Note: Please inspect your spoiler for proper fit before painting or mounting**

## Lip Spoiler Installation

### No Drill Application STEP-by-STEP

#### **Step 1. Surface Cleaning**

Clean surface area that is to be covered by spoiler thoroughly, with Isopropyl Alcohol or lighter fuel (available at convenient store or supermarket) (See Illustration 1)

#### **Step 2. Test Fitting**

Before removing the tape backing, test fit spoiler in order to get comfortable with the placement. You can mark the position with a grease free pen or masking tape for a perfect fit. (See Illustration 2)

#### **Step 3. Preparation**

Peel back the corner of the red liner on the 3M tape and remove all pieces, avoid touching exposed tape. (See Illustration 6)

#### **Step 4. Installation**

Gently press spoiler into place on the deck lid, hatch or rear glass. Once satisfied with placement, firmly press down on spoiler to ensure cohesion along entire vehicle surface. Continue to apply pressure or use masking tape to keep unit from lifting. (See Illustration 8 & Illustration 9)

#### **Helpful Tips**

Adhesive silicones and/or adhesion promoters are often used in conjunction with provided 3M tape for long lasting durability. For best results installation should be conducted in temperatures above 72. Refer to tape manufacturer's recommendations for full details. Do not clean, wash, wax or drive for 12 hours after installation. The manufacturer is not responsible for no drill attachment durability.

### Drill Application STEP-by-STEP

#### **Hardware Kit**

Supplied on each spoiler

1. Set of Screws
2. Set of locator strips

#### **Step 1**

Clean surface area that is to be covered by spoiler thoroughly, with Isopropyl Alcohol or lighter fuel (available at convenient store or supermarket) (See Illustration 1)

#### **Step 2**

Before removing the tape backing, test fit spoiler in order to get comfortable with the placement. You can mark the position with a grease free pen or masking tape for a perfect fit. (See Illustration 2)

#### **Step 3**

Insert the locator strips into the Mounting Roles. A small piece of masking tape will hold it temporarily in place. (See Illustration 3 & Illustration 4)

#### **Step 4**

Set the spoiler in the position you feel looks best.

#### **Step 5**

Tape the location strips to the trunk lid on both sides of the legs. Carefully lift the spoiler off the trunk lid leaving the locator strips. (See Illustration 4)

#### **Step 6**

Drill through the centre of the locator strip. (See Illustration 5)

#### **Step 7**

Peel back the corner of the red liner on the 3M tape, avoid touching exposed tape. (See Illustration 6)

#### **Step 8**


Tighten the screws lightly to a depth of about 1/8" (about 2 screw driver turns), peel the tape protecting liner completely and press the spoiler gently onto the trunk lid. (See Illustration 7 to Illustration 9)

#### **Step 9**

Tighten the screws firmly.

#### **\* Important Notice for Painting of PU Spoiler**

This spoiler is made of high quality CFC free polyurethane material. If additional painting is needed for this primer spoiler, please use flexible agent.

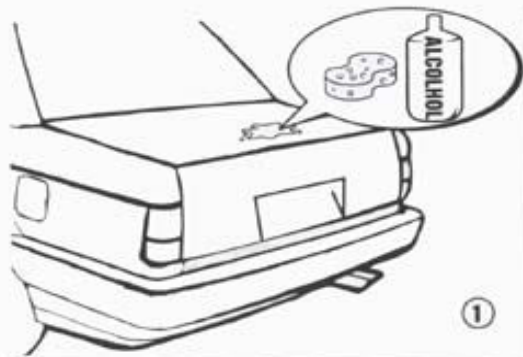

## ILLUSTRATIONS

