

FITTING INSTRUCTION FOR FENDER FLARES
PART NO: FF008-PP / FF008SB-PP
07-11 CHEVY SILVERADO STD, LONG & SHORT BED

PLEASE READ THESE INSTRUCTIONS CAREFULLY PRIOR TO INSTALLATION

Important Note: Please inspect your fender flares for proper fit before painting or mounting

Installation Instructions

Hardware Kit (Supplied on each set of fender flares)
Self Tapping Screws = 1 Package

Tools Required:-

- 1/8" Diameter Drill Bits / Phillip Screw Driver

Fender Flares Installation:-

Step 1

1. Test fit the fender flares on the vehicle.

Step 2

2. Wet a soft cloth or tissue paper with alcohol or cleaning solvent and clean the entire surface which will be taken up by the double sided adhesive tape. (See illustration 1, area marked xxx)

Step 3

3. Peel about 2" of the vinyl backing away from one end of the double sided adhesive tape (See illustration 2).

Step 4

4. Use a 1/8" diameter drill bit or the provided self tapping screw and attach the flare at the various points. (See illustration 3)

(The factory screws interfere the fitting without using the plastic washers, you may remove the factory screws and attach the fender without using the plastic washers)

Step 5

(If plastic washers have been used)

5. Pulling the vinyl backing free & apply firm pressure to obtain a good adhesion. Do not wash the vehicle until 24 hours past.

FITTING INSTRUCTION FOR FENDER FLARES
PART NO: FF008-PP / FF008SB-PP
07-11 CHEVY SILVERADO STD, LONG & SHORT BED

PLEASE READ THESE INSTRUCTIONS CAREFULLY PRIOR TO INSTALLATION


Important Note: Please inspect your fender flares for proper fit before painting or mounting

Illustrations

1)



2)

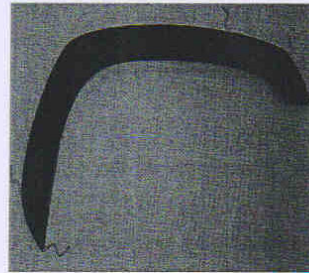

3)

