

# MODEL NO: ABS434A

## CHEVROLET CAMARO 2016UP SPOILER

PLEASE READ THESE INSTRUCTION CAREFULLY PRIOR TO INSTALLATION

Important Note: Please inspect your spoiler for proper fit before painting or mounting

### Installation Instructions

#### Hardware Kit (Supplied on each spoiler)

- |                             |                     |                                 |
|-----------------------------|---------------------|---------------------------------|
| 1. M6 x 12mm Screws = 6 pcs | 3. Washers = 10 pcs | 5. Template (reversible) = 1 pc |
| 2. M6 x 16mm Screws = 4 pcs | 4. Gaskets = 2 pcs  |                                 |

#### **Tools Required :-**

- Isopropyl alcohol or equivalent / Phillips Screwdriver / Masking Tape / Vacuum Cleaner / Centre Punch / Hand Drill / Drill Bits : 8mm / Hammer

#### **General Instructions :-**

- a) Use protective covers to avoid damage to vehicle
- b) Clean the mounting areas and dry thoroughly


#### **Spoiler Installation :-**

1. Stick the template (reversible) with masking tape on the correct position of the Driver Side of trunk lid. (Illustration 1) Drill 8 mm on each hole. (Repeat the same step on the Passenger Side of trunk lid)
2. Stick the gasket on each spoiler's leg and slightly tighten spoiler's leg with M6 x 12mm screws to the trunk. (Illustration 2)
3. Tighten both spoilers' legs to the spoiler with M6 x 16mm screws. (Illustration 3)
4. Finish tightening all the M6 screws to hold the spoiler securely to the trunk. (Illustration 4).

1)



2)

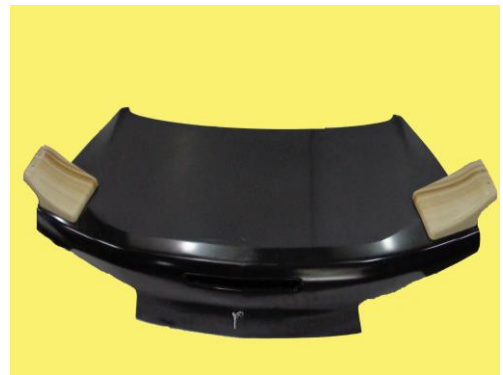

3)



4)

