

UNIVERSAL HOOD SCOOP

PLEASE READ THESE INSTRUCTIONS CAREFULLY PRIOR TO INSTALLATION

Important Note: Please inspect your hood scoop for proper fit before painting or mounting

Installation Instructions

Hardware Kit (Supplied on each hood scoop)

1. Locator = 2 pcs
2. Washers = 2 pcs
3. Screws = 2 pcs

Tools Required :-

- Isopropyl alcohol or equivalent / Phillips Screwdriver / Masking Tape / Vacuum Cleaner / Centre Punch / Hand Drill / Drill Bits : 3/16" / Hammer

Hood Scoop Installation :-

Step 1

1. Clean surface area that is to be covered by the hood scoop with isopropyl alcohol or equivalent.

Step 2

2. Peel the tape backing of the locator strip and attach it to the mounting holes of the hood scoop (illustration 1)

Step 3

3. Set the hood scoop at the position where it gives a good fit. Mark the position with a grease pen or masking tape for a perfect fit.

Step 4

5. Tape the locator strips on the hood, carefully remove the hood scoop leaving the locator strips (illustration 2)

Step 5

- Center punch the holes for drilling. Drill 3/16" holes on the two punch mark locations. Use minimum pressure when drilling to avoid denting of hood


Step 6

7. Peel the tape backing at the corner (illustration 3) and tighten the two screws.


Step 7

8. Peel the tape backing completely and press the hood scoop gently onto the hood.

1)

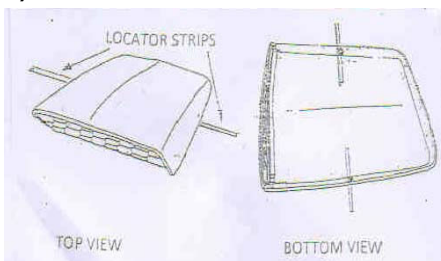

2)

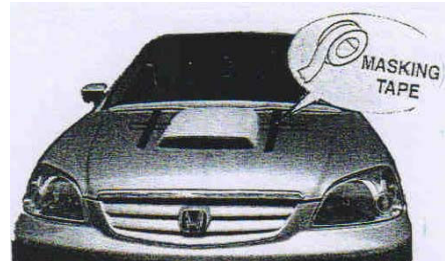

3)

