

WWW.PUTTECHSPOILER.COM

"TAPE & SCREW" FENDER FLARES

No Edge Trim

Perfect Fit
with 3M
Tape

Available in
Matte Black
Only

Strong Fitment
for Automatic
Car Wash



OEM
Quality

Light &
Durable

30 Minutes
Installation

Email : putech@yahoo.com | Phone : 817-478-6422 | Fax : 817-887-5475

FACTORY STYLE FENDER FLARES

CHEVROLET

FF001-PP

(4 pcs)



Chevy Avalanche (w/o body cladding) 2002-2006

FF002-PP

(4 pcs)



Chevy Blazer 2dr 1992-1994

FF002-PP

(4 pcs)



**Chevy CK 1500 1988-1998
Chevy CK 2500 / 3500 1988-2000**

FF002-PP FRONT

(2 pcs)



Chevy CK Stepside 1988-1998 (front only)

FF002-PP FRONT

(2 pcs)



Chevy CK Dually 1988-2000 (front only)

FF001-PP

(4 pcs)



Chevy Silverado 1999-2002

FF001-PP FRONT

(2 pcs)



Chevy Silverado Dually 1999-2002 (front only)

FF001-PP FRONT

(2 pcs)



Chevy Silverado Stepside 1999-2006 (front only)

CHEVROLET

FF001-PP (4 pcs)



Chevy Silverado 2003-2006
Chevy Silverado Classic 2007-2007

FF001-PP FRONT (2 pcs)



Chevy Silverado Dually 2003-2006 (front only)
Chevy Silverado Classic Dually 2007-2007 (front only)

FF008SB-PP (4 pcs)



Chevy Silverado 1500 Short Bed (5.8') 2007-2013
(Not fit for Chevrolet Silverado 2500/3500)

FF008-PP (4 pcs)



Chevy Silverado 1500 Std & Long Bed (6.5'/8') 2007-2013
Chevy Silverado 2500 / 3500 Std & Long Bed (6.5'/8') 2007-2014

FF008-PP FRONT (2 pcs)



Chevy Silverado Dually 2007-2014 (front only)

FF017-PP (4 pcs)



Chevy Silverado 1500/2500/3500 2016 Up

FF002-PP (4 pcs)



Chevy Suburban 1992-1999

FF001-PP (4 pcs)



Chevy Suburban 2000-2006

FF002-PP (4 pcs)



Chevy Tahoe 2dr 1995-1999

FF003-PPTH (6 pcs)



Chevy Tahoe 2000-2006

DODGE

FF014-PP (4 pcs)



Dodge RAM 1500 1994-2001
Dodge RAM 2500 / 3500 1994-2002

FF014-PP FRONT (2 pcs)



Dodge RAM Dually 1994-2002 (front only)

FF006-PP (4 pcs)



Dodge RAM 2002-2005

FF006-PP (4 pcs)



Dodge RAM 1500 2006-2008
Dodge RAM 2500 / 3500 2006-2009

FF006-PP FRONT (2 pcs)



Dodge RAM Dually 2003-2005 (front only)

FF006-PP FRONT (2 pcs)



Dodge RAM Dually 2006-2009 (front only)

FF010-PP (4 pcs)



Dodge RAM 1500 2009-2017

FF009-PP (4 pcs)



Dodge RAM 2500 / 3500 2010-2017

FF009-PP FRONT (2 pcs)



Dodge RAM Dually 2010-2017 (front only)

FORD

FF004-PP (4 pcs)



Ford F150 1997-2003

FORD

FF005-PP

(4 pcs)



Ford F150 2004-2008

FF005-PP FRONT

(2 pcs)



Ford F150 Stepside 2004-2008 (front only)

FF013-PP

(4 pcs)



Ford F150 2009-2014

FF018-PP

(4 pcs)



Ford F150 2017 Up

FF012-PP

(4 pcs)



Ford F250 / F350 Super Duty 1999-2007

FF012-PP FRONT

(2 pcs)



Ford F250 / F350 Super Duty Dually 1999-2007 (front only)

FF015-PP

(4 pcs)



Ford F250 / F350 Super Duty 2008-2010

FF016-PP

(4 pcs)



Ford F250 / F350 Super Duty 2011-2016

GMC

FF002-PP

(4 pcs)



GMC Sierra 1500 1988-1998
GMC Sierra 2500 / 3500 1989-2000

FF002-PP FRONT

(2 pcs)



GMC Sierra Dually 1989-2000 (front only)

GMC

FF001-PP

(4 pcs)



GMC Sierra 1500 1999-2006
GMC Sierra 2500 / 3500 2001-2006
GMC Sierra Classic 2007-2007

FF001-PP FRONT

(2 pcs)



GMC Sierra Dually 2001-2007 (front only)

FF011-PP

(4 pcs)



GMC Sierra 1500 / 2500 / 3500 2007-2014

FF011-PP FRONT

(2 pcs)



GMC Sierra Dually 2007-2014 (front only)

FF002-PP


(4 pcs)



GMC Suburban 1992-1999

FF002-PP FRONT

(2 pcs)

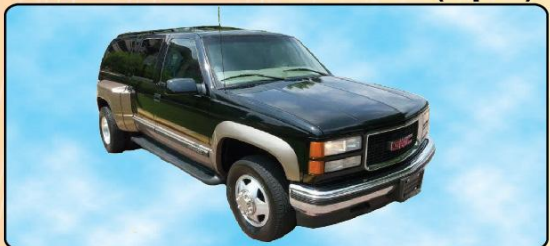

GMC Suburban Dually 1992-1999 (front only)

FF002-PP

(4 pcs)



GMC Yukon 2dr 1995-1999

FF003-PPYK

(6 pcs)



GMC Yukon 2000-2006

FF001-PP

(4 pcs)



GMC Yukon XL 2000-2006

APPLICATIONS BY NAMEPLATES

Description	Part No.
CHEVROLET : APPLICATIONS	
Avalanche (w/o body cladding) 2002-2006 (4 pcs)	FF001-PP
Blazer 2dr 1992-1994 (4 pcs)	FF002-PP
CK 1500 1988-1998 (4 pcs)	FF002-PP
CK 2500 / 3500 1988-2000 (4 pcs)	FF002-PP
CK Stepside 1988-1998 (2 pcs)	FF002-PP FRONT
CK Dually 1988-2000 (2 pcs)	FF002-PP FRONT
Silverado 1500 1999-2006 (4 pcs)	FF001-PP
Silverado 2500 / 3500 2001-2006 (4 pcs)	FF001-PP
Silverado Dually 2001-2006 (2 pcs)	FF001-PP FRONT
Silverado Stepside 1999-2006 (2 pcs)	FF001-PP FRONT
Silverado Classic 2007-2007 (4 pcs)	FF001-PP
Silverado Classic Dually 2007-2007 (2 pcs)	FF001-PP FRONT
Silverado 1500 Short Bed (5.8') 2007-2013 (4 pcs)	FF008SB-PP
Silverado 1500 Std & Long Bed (6.5' / 8') 2007-2013 (4 pcs)	FF008-PP
Silverado 2500 / 3500 Std & Long Bed (6.5' / 8') 2007-2014 (4 pcs)	FF008-PP
Silverado Dually 2007-2014 (2 pcs)	FF008-PP FRONT
Silverado 1500 / 2500 / 3500 2016 Up (4 pcs)	FF017-PP
Suburban 1992-1999 (4 pcs)	FF002-PP
Suburban 2000-2006 (4 pcs)	FF001-PP
Tahoe 2dr 1995-1999 (4 pcs)	FF002-PP
Tahoe 2000-2006 (6 pcs)	FF003-PPTH
DODGE : APPLICATIONS	
RAM 1500 1994-2001 (4 pcs)	FF014-PP
RAM 2500 / 3500 1994-2002 (4 pcs)	FF014-PP
RAM Dually 1994-2002 (2 pcs)	FF014-PP FRONT
RAM 1500 2002-2008 (4 pcs)	FF006-PP
RAM 2500 / 3500 2003-2009 (4 pcs)	FF006-PP
RAM Dually 2003-2009 (2 pcs)	FF006-PP FRONT
RAM 1500 2009-2017 (4 pcs)	FF010-PP
RAM 2500 / 3500 2010-2017 (4 pcs)	FF009-PP
RAM Dually 2010-2017 (2 pcs)	FF009-PP FRONT
FORD : APPLICATIONS	
F150 1997-2003 (4 pcs)	FF004-PP
F150 2004-2008 (4 pcs)	FF005-PP
F150 Stepside 2004-2008 (2 pcs)	FF005-PP FRONT
F150 2009-2014 (4 pcs)	FF013-PP
F150 2017 Up (4 pcs)	FF018-PP
F250 / F350 Super Duty 1999-2007 (4 pcs)	FF012-PP
F250 / F350 Super Duty Dually 1999-2007 (2 pcs)	FF012-PP FRONT
F250 / F350 Super Duty 2008-2010 (4 pcs)	FF015-PP
F250 / F350 Super Duty Dually 2008-2010 (2 pcs)	FF015-PP FRONT
F250 / F350 Super Duty 2011-2016 (4 pcs)	FF016-PP
GMC : APPLICATIONS	
Sierra 1500 1988-1998 (4 pcs)	FF002-PP
Sierra 2500 / 3500 1989-2000 (4 pcs)	FF002-PP
Sierra Dually 1989-2000 (2 pcs)	FF002-PP FRONT
Sierra 1500 1999-2006 (4 pcs)	FF001-PP
Sierra 2500 / 3500 2001-2006 (4 pcs)	FF001-PP
Sierra Dually 2001-2007 (2 pcs)	FF001-PP FRONT
Sierra Classic 2007-2007 (4 pcs)	FF001-PP
Sierra 1500 2007-2013 (4 pcs)	FF011-PP
Sierra 2500 / 3500 2007-2014 (4 pcs)	FF011-PP
Sierra Dually 2007-2014 (2 pcs)	FF011-PP FRONT
Suburban 1992-1999 (4 pcs)	FF002-PP
Suburban Dually 1992-1999 (2 pcs)	FF002-PP FRONT
Yukon 2dr 1995-1999 (4 pcs)	FF002-PP
Yukon 2000-2006 (6 pcs)	FF003-PPYK
Yukon XL 2000-2006 (4 pcs)	FF001-PP

BRP STYLE FENDER FLARES

(BOLT-ON-RIVET-POCKET STYLE)



CHEVROLET

BRP001 (4 pcs)



Chevy Avalanche (w/o body cladding) 2002-2006

BRP001 (4 pcs)



Chevy Silverado 1999-2002

BRP001 (4 pcs)



Chevy Silverado 2003-2006

BRP001 FRONT (2 pcs)



Chevy Silverado Stepside 1999-2006 (front only)

BRP001 FRONT (2 pcs)



Chevy Silverado Dually 2001-2007 (front only)

BRP001 (4 pcs)



Chevy Silverado Classic 2007-2007

CHEVROLET

BRP008 (4 pcs)



Chevy Silverado 1500/2500/3500 Std & Long Bed (6.5' / 8') 2007-2014

BRP008SB (4 pcs)



Chevy Silverado 1500 Short Bed (5.8') 2007-2013

BRP001 (4 pcs)



Chevy Suburban 2000-2006

DODGE

BRP006 (4 pcs)



Dodge RAM 2002-2005

BRP006 FRONT (2 pcs)



Dodge RAM Dually 2002-2005 (front only)

BRP006 (4 pcs)



Dodge RAM 2006-2009

BRP006 FRONT (2 pcs)



Dodge RAM Dually 2006-2009 (front only)

BRP010 (4 pcs)



Dodge RAM 1500 2009-2017

BRP009 (4 pcs)



Dodge RAM 2500 / 3500 2010-2017

BRP009 FRONT (2 pcs)



Dodge RAM 2500 / 3500 Dually 2010-2017 (front only)

FORD

BRP004

(4 pcs)



Ford F150 1997-2003

BRP005

(4 pcs)



Ford F150 2004-2008

BRP012

(4 pcs)



Ford F250 / F350 Super Duty 1999-2007

BRP012 FRONT

(2 pcs)



Ford F250 / F350 Super Duty Dually 1999-2007 (front only)

BRP015

(4 pcs)



Ford F250 / F350 Super Duty 2008-2010

BRP015 FRONT

(2 pcs)



Ford F250 / F350 Super Duty Dually 2008-2010 (front only)

GMC

BRP001

(4 pcs)



GMC Sierra 1999-2006

BRP001 FRONT

(2 pcs)



GMC Sierra Stepside 1999-2006 (front only)

BRP001 FRONT

(2 pcs)



GMC Sierra Dually 1999-2007 (front only)

BRP001

(4 pcs)



GMC Yukon XL 2000-2006

APPLICATIONS BY NAMEPLATES

Description	Part No.
CHEVROLET : APPLICATIONS	
Avalanche (w/o body cladding) 2002-2006 (4 pcs)	BRP001
Silverado 1999-2002 (4 pcs)	BRP001
Silverado 2003-2006 (4 pcs)	BRP001
Silverado Stepside 1999-2006 (2 pcs)	BRP001 FRONT
Silverado Dually 2001-2007 (2 pcs)	BRP001 FRONT
Silverado Classic 2007-2007 (4 pcs)	BRP001
Silverado 1500/2500/3500 Std & Long Bed (6.5' / 8') 2007-2014 (4 pcs)	BRP008
Silverado 1500 Short Bed (5.8') 2007-2013 (4 pcs)	BRP008SB
Suburban 2000-2006 (4 pcs)	BRP001
DODGE : APPLICATIONS	
RAM 2002-2005 (4 pcs)	BRP006
RAM 2006-2009 (4 pcs)	BRP006
RAM Dually 2002-2005 (2 pcs)	BRP006 FRONT
RAM Dually 2006-2009 (2 pcs)	BRP006 FRONT
RAM 1500 2009-2017 (4 pcs)	BRP010
RAM 2500 / 3500 2010-2017 (4 pcs)	BRP009
RAM 2500 / 3500 Dually 2010-2017 (2 pcs)	BRP009 FRONT
FORD : APPLICATIONS	
F150 1997-2003 (4 pcs)	BRP004
F150 2004-2008 (4 pcs)	BRP005
F250 / F350 Super Duty 1999-2007 (4 pcs)	BRP012
F250 / F350 Super Duty Dually 1999-2007 (2 pcs)	BRP012 FRONT
F250 / F350 Super Duty 2008-2010 (4 pcs)	BRP015
F250 / F350 Super Duty Dually 2008-2010 (2 pcs)	BRP015 FRONT
GMC : APPLICATIONS	
Sierra 1999-2006 (4 pcs)	BRP001
Sierra Stepside 1999-2006 (2 pcs)	BRP001 FRONT
Sierra Dually 1999-2007 (2 pcs)	BRP001 FRONT
Yukon XL 2000-2006 (4 pcs)	BRP001

BEST SELLERS.....SAVE TIME & MONEY

**USA WAREHOUSE & DISTRIBUTION CENTRE:-
P.U.TECH SPOILER LP**

721 East Kennedale Pkwy, Kennedale, TX 76060, United States.

Tel: 817-478-6422 Cell Phone: 817-832-9444

Fax: 817-887-5475 / 817-478-6477

Email: putech@yahoo.com

Contact Person: Stephanie (Marketing)

WWW.PUTECHSPOILER.COM

BRP STYLE "TAPE & SCREW" FENDER FLARES

Strong Fitment
for Automatic
Car Wash

'Clip On'
Bolt



No Edge
Trim

Perfect Fit
with 3M
Tape

Available in
Matte Black
Only

OEM
Quality

Light &
Durable

30 Minutes
Installation

Email : putech@yahoo.com | Phone : 817-478-6422 | Fax : 817-887-5475