


**MODEL NO: ABS446A
FORD MUSTANG 2015UP SPOILER**

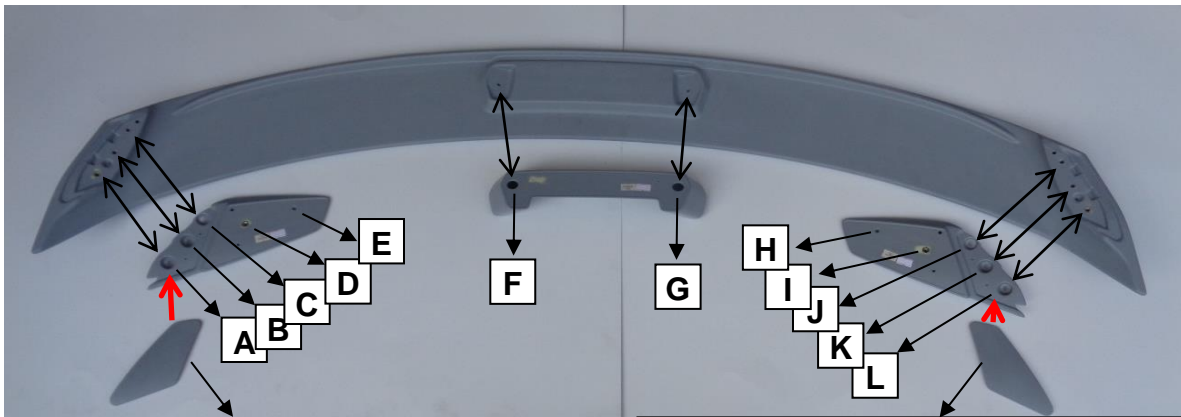

Remove the tape backing to paste on the side pedestal

Remove the tape backing to paste on the side pedestal



KIT CONTENTS & APPLICATIONS:-

| | | |
|----------------------------------|----------|-------------------------------------|
| Template | = 1 pc | (For D, E, H & I) |
| Screws M6 x 16 mm | = 8 pcs | (For A, B, C, D, I, J, K & L) |
| Screws Hexagon Flange M6 x 16 mm | = 2 pcs | (For F & G) |
| Socket Set Screws M6 x 16 mm | = 2 pcs | (For E & H) |
| Socket Set Nut | = 2 pcs | (For E & H) |
| Washers | = 10 pcs | (For A, B, C, D, E, H, I, J, K & L) |
| Fitting Instruction | = 1 pc | |

Brief Installation Procedures:-

1. Before install the spoiler on the truck, please tighten the pedestal spoiler on each side of spoiler with screws (A, B, C and J, K, L)
2. Stick the Template (reversible) with the masking tape on the correct position of the Driver Side of trunk lid. (Repeat the same step on the Passenger side of trunk lid)
3. Drill 1/8" as pilot holes at D, E, H & I (on trunk lid).
4. Enlarge the pilot holes 29/64" at D, E, H & I (on trunk lid).
5. Finish tightening all the M6 screws to hold the spoiler securely to the trunk.