
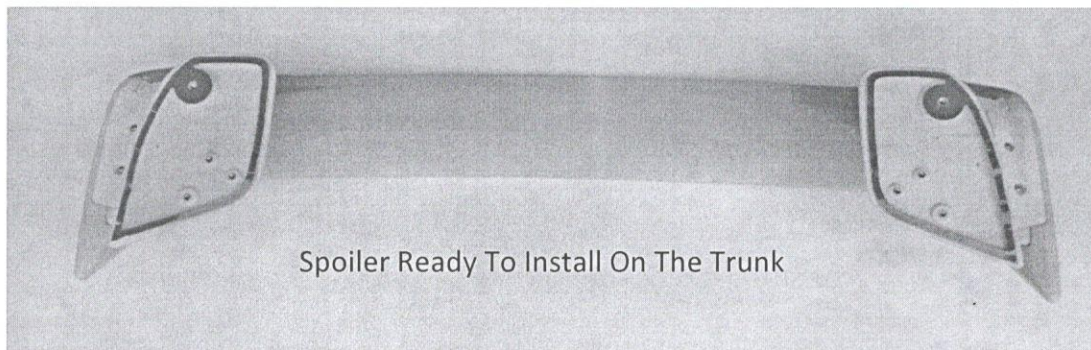


**MODEL NO: ABS452A  
SUBARU WRX 2015UP SPOILER**

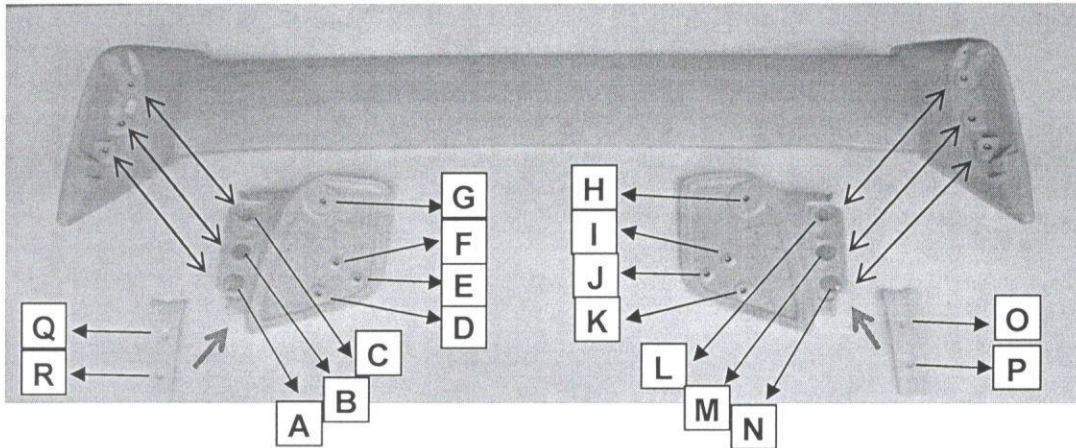

**KIT CONTENTS & APPLICATIONS:-**

Screws M6 x 16 mm	= 14 pcs	(For A, B, C, D, E, F, G, H, I, J, K, L, M & N)
Screws #8 x 5/8	= 4 pcs	(For O, P, Q & R)
Washers - Flat M6 x 13 x 1.0	= 14 pcs	(For A, B, C, D, E, F, G, H, I, J, K, L, M & N)
Washers - M5 x 12 x 0.8	= 4 pcs	(For O, P, Q & R)
Locators	= 8 pcs	(For D, E, F, G, H, I, J & K)
Gasket Foam Tape	= 6 pcs	(For D, E, F, I, J & K)
Fitting Instruction	= 1 pc	

**Brief Installation Procedures:-**

1. Before install the spoiler on the truck, please tighten the pedestal spoiler on each side of spoiler with screws (A, B, C and L, M, N)
2. Tighten the small cover with screws (O, P, Q and R)
3. Paste the gasket foam tape on the pedestal spoiler (D, E, F and I, J, K)
4. Drill 1/8" as pilot holes at D, E, F, G and H, I, J, K (on trunk lid).
5. Enlarge the pilot holes 29/64" at D, E, F, G and H, I, J, K (on trunk lid).
6. Finish tightening all the M6 screws to hold the spoiler securely to the trunk.