
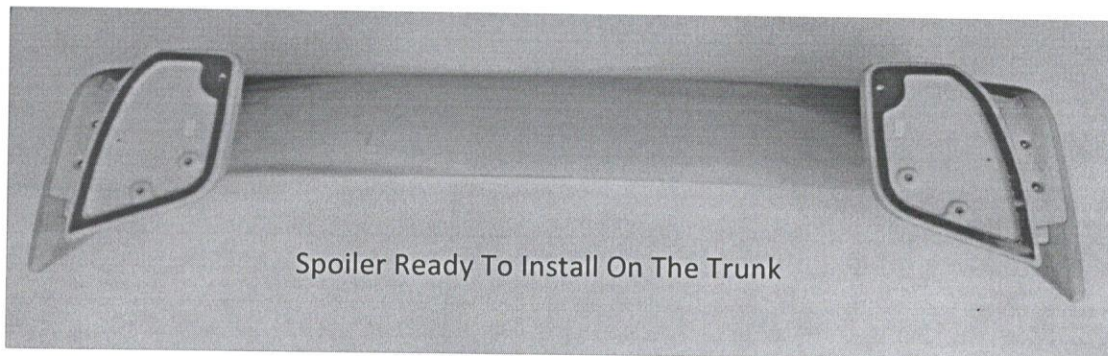


**MODEL NO: ABS454A
SUBARU IMPREZA 2017UP SPOILER**

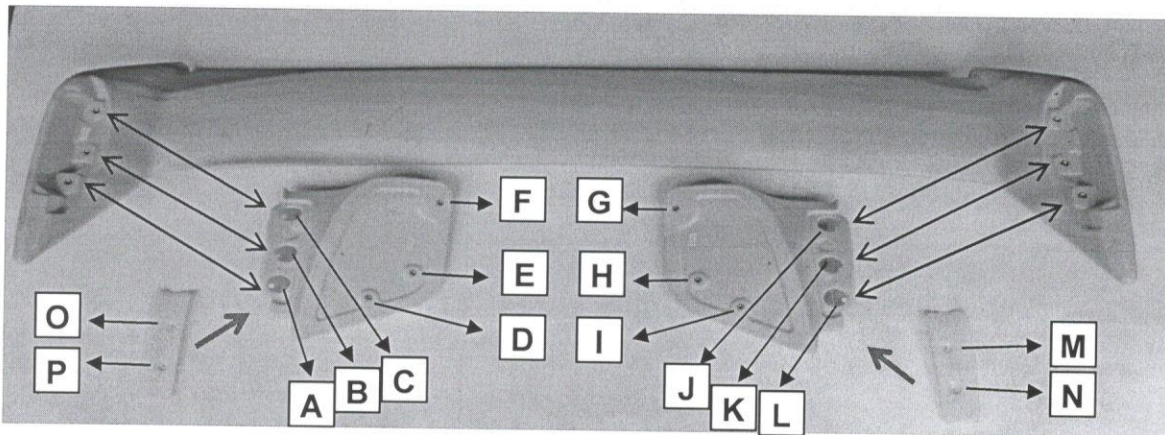

KIT CONTENTS & APPLICATIONS:-

Screws M6 x 16 mm	= 12 pcs	(For A, B, C, D, E, F, G, H, I, J, K & L)
Screws #8 x 5/8	= 4 pcs	(For M, N, O & P)
Washers - Flat M6 x 13 x 1.0	= 14 pcs	(For A, B, C, D, E, F, G, H, I, J, K & L)
Washers - M5 x 12 x 0.8	= 4 pcs	(For M, N, O & P)
Locators	= 6 pcs	(For D, E, F, G, H & I)
Fitting Instruction	= 1 pc	

Brief Installation Procedures:-

1. Before install the spoiler on the truck, please tighten the pedestal spoiler on each side of spoiler with screws (A, B, C and J, K, L)
2. Tighten the small cover with screws (M, N, O and P)
3. Drill 1/8" as pilot holes at D, E, F and G, H, I (on trunk lid).
4. Enlarge the pilot holes 29/64" at D, E, F and G, H, I (on trunk lid).
5. Finish tightening all the M6 screws to hold the spoiler securely to the trunk.