


MODEL NO: ABS482A
FORD MUSTANG 2024UP SPOILER

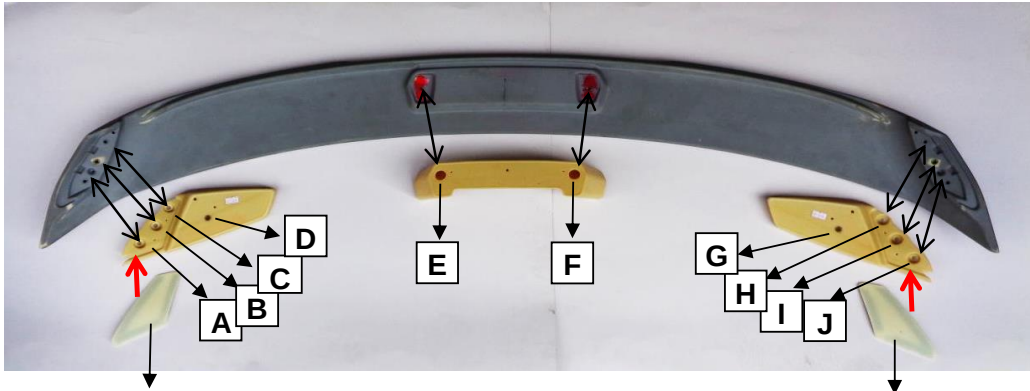

Remove the tape backing to paste on the side pedestal

Remove the tape backing to paste on the side pedestal



KIT CONTENTS & APPLICATIONS:-

Screws M6 x 16 mm	= 6 pcs	(For A, B, C, H, I & J)
Screws Hexagon Flange M6 x 16 mm	= 4 pcs	(For E, F, D & G)
Washers	= 6 pcs	(For A, B, C, H, I & J)
Washers 1/4 x 1 x 19mm	= 2 pcs	(For D & G)

Brief Installation Procedures:-

1. Before install the spoiler on the truck, please tighten the pedestal spoiler on each side of spoiler with screws (A, B, C and H, I, J)
2. Drill 8 mm holes at center Point Z of trunk lid for D & G (Point Z as per photo above). (Repeat the same step on the opposite side of trunk lid)
3. Finish tightening all the M6 screws to hold the spoiler securely to the trunk.