

PART NO: ABSHS-07

2024UP FORD MUSTANG HOOD SCOOP

PLEASE READ THESE INSTRUCTIONS CAREFULLY PRIOR TO INSTALLATION

Important Note: Please inspect your hood scoop for proper fit before painting or mounting

Installation Instructions

No Hardware Kit Supplied. It's tape on hood scoop.

Tools Required:-

- Isopropyl alcohol or equivalent / Masking Tape

Hood Scoop Installation:-

Step 1

1. Clean surface area that is to be covered by the hood scoop with isopropyl alcohol or equivalent.

Step 2

2. Set the hood scoop on the center line of the hood; the recommended distance between the hood scoop edge and the front hood edge is 8" (illustration 1).


Step 3

3. Peel the tape backing at the corner (illustration 2).

Step 4

4. Peel the tape backing completely and press the hood scoop gently onto the hood.

1)

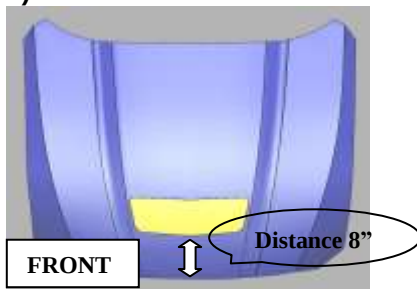

2)



3)

